

LOWEPRO DIGITAL POUCH MATRIX 4-2009



		Terraclime 10	Terraclime 30	Terraclime 50	Luxe	Apex 5AW	Apex 10AW	Apex 20AW	Apex 30AW	Apex 60AW	Rezo 10	Rezo 15	Rezo 20	Rezo 30	Rezo 50	Rezo 60	Napoli 5	Napoli 10	Napoli 20	Napoli 30	Spectrum 10	Spectrum 30	Spectrum 50	Tasca 10	Tasca 20	Tasca 30	D-Pods 10	D-Pods 20	D-Pods 30	D-Pods 40	D-Pods 50	Ridge 10	Ridge 20	Ridge 30	Ridge 60		
Agfa	DC-8330i																																				
Argus	DC-6340	•	•																																		
BenQ	C840	•	•																																		
	DC C1050	•	•																																		
	DC C740i	•	•																																		
	DC C750	•	•																																		
	DC C820	•	•		•																																
	DC C850	•	•																																		
	DC E100		•																																		
	DC E800	•			•																																
	DSC X800		•																																		

*Availability may vary by country or location



	Terralime 10	Terralime 30	Terralime 50	Luxe	Apex 5AW	Apex 10AW	Apex 20AW	Apex 30AW	Apex 60AW	Rezo 10	Rezo 15	Rezo 20	Rezo 30	Rezo 50	Rezo 60	Napoli 5	Napoli 10	Napoli 20	Napoli 30	Spectrum 10	Spectrum 30	Spectrum 50	Tasca 10	Tasca 20	Tasca 30	D-Pods 10	D-Pods 20	D-Pods 30	D-Pods 40	D-Pods 50	Ridge 10	Ridge 20	Ridge 30	Ridge 60		
Canon	MD-110 DV								•																											•
	DC210/230																																			•
	DC-220V																																			•
	Digital IXUS 80	•		•	•																•															
	IXUS 70	•		•	•						•	•									•						•									
	IXY Digital 820IS	•		•	•						•	•									•				•			•								
	MD110 DV																																			
	MD160																																			
	MV930/940/950/960																																			
	MVX430																																			
	MVX450/460																																			
	PowerShot A1000 IS		•										•							•						•										
	PowerShot A1100 IS		•									•								•						•										
	PowerShot A2000 IS		•									•								•						•										
	PowerShot A2100 IS																																			
	PowerShot A470		•																																	
	PowerShot A480	•																																		
	PowerShot A570 IS		•																																	
	PowerShot A580	•																																		
	PowerShot A590 IS	•																																		
	PowerShot A650 IS			•																																
	PowerShot A720 IS		•																																	
	PowerShot D10			•																																
	PowerShot E1		•																																	
	PowerShot G10			•																																
	PowerShot G9		•																																	
	PowerShot S5 IS			•																																
	PowerShot SD1000/IXUS 70	•			•																															
	PowerShot SD1100 IS/IXUS 80	•			•																															
	PowerShot SD1200 IS	•			•																															
	PowerShot SD770/IXUS 85	•			•																															
	PowerShot SD780 IS	•			•																															
	PowerShot SD790 IS/IXUS 90 IS	•			•																															
	PowerShot SD850 IS/IXUS 950 IS	•			•																															
	PowerShot SD870 IS/IXUS 860 IS	•			•																															
	PowerShot SD880 IS/IXUS 870 IS	•			•																															
	PowerShot SD890 IS/IXUS 970 IS	•			•																															
	PowerShot SD950 IS/Digital IXUS 960 IS	•			•																															
	PowerShot SD960 IS		•																																	
	PowerShot SD970 IS	•			•																															
	PowerShot SD990 IS/IXUS 980 IS		•																																	
	PowerShot SX100 IS		•																																	
	PowerShot SX110 IS		•																																	
	PowerShot SX200 IS		•																																	
	PowerShot TX-1	•																																		
	SD1200 IS	•																																		
	SD850IS/Ixus 950IS	•																																		
	Vixia HG20/HG21			•																																
	ZR800																																			
	ZR830/850																																			
	ZR900																																			
	ZR930																																			
	ZR950																																			

*Availability may vary by country or location

LOWEPRO DIGITAL POUCH MATRIX 4-2009



		Terraclime 10	Terraclime 30	Terraclime 50	Luxe	Apex 5AW	Apex 10AW	Apex 20AW	Apex 30AW	Apex 60AW	Rezo 10	Rezo 15	Rezo 20	Rezo 30	Rezo 50	Rezo 60	Napoli 5	Napoli 10	Napoli 20	Napoli 30	Spectrum 10	Spectrum 30	Spectrum 50	Tasca 10	Tasca 20	Tasca 30	D-Pods 10	D-Pods 20	D-Pods 30	D-Pods 40	D-Pods 50	Ridge 10	Ridge 20	Ridge 30	Ridge 60		
Casio	EXILIM EX-FC100		•					•	•			•										•															
	EXILIM EX-FS10		•																				•														
	EXILIM EX-S10	•			•	•					•	•	•									•			•			•									
	EXILIM EX-S12	•			•	•					•	•	•									•			•			•									
	EXILIM EX-S5		•										•										•					•									
	EXILIM EX-S880	•										•	•										•			•		•									
	EXILIM EX-V7/V8	•										•	•										•			•		•									
	EXILIM EX-Z100	•			•	•						•	•										•			•		•									
	EXILIM EX-Z1080	•			•	•						•	•										•			•		•									
	EXILIM EX-Z11	•			•	•						•	•										•			•		•									
	EXILIM EX-Z200	•			•	•						•	•										•			•		•									
	EXILIM EX-Z250		•																				•			•		•									
	EXILIM EX-Z270		•																				•			•		•									
	EXILIM EX-Z29		•																				•			•		•									
	EXILIM EX-Z300		•																				•			•		•									
	EXILIM EX-Z400		•																				•			•		•									
	EXILIM EX-Z80	•			•	•						•	•										•			•		•									
	EXILIM EX-Z85		•																				•			•		•									
	EXILIM EX-Z850	•			•	•						•	•										•			•		•									
	EXILIM EX-Z9	•			•	•						•	•										•			•		•									
DXG	110								•			•									•																
	202V	•								•					•							•				•											
	305V	•													•							•				•											
	568	•											•									•				•			•								
	572V			•						•					•							•				•											
Fuji	FinePix A100/A150	•									•										•																
	FinePix A820/A825/A900	•																				•															
	FinePix A850	•			•							•	•									•			•			•									
	FinePix A920	•																				•															
	FinePix F100fd	•																				•															
	FinePix F200EXR	•																				•															
	FinePix F40fd	•																				•															
	FinePix F47fd	•																				•															
	FinePix F480	•																				•															
	FinePix F50fd/F60fd	•			•							•	•									•				•		•									
	FinePix J10	•			•																	•															
	FinePix J100/J110W/J120W/J150W	•			•																	•				•		•									
	FinePix J12/J50		•																			•				•											
	FinePix S1000fd			•																																	
	FinePix S2000HD			•																																	
	FinePix S5800			•																																	
	FinePix S700			•																																	
	FinePix S8000fd			•																																	
	FinePix S8100fd			•																																	
	FinePix Z10fd/Z100fd/Z200fd	•			•	•						•	•									•				•		•									
	FinePix Z20fd	•			•	•						•	•									•				•		•									
	FinePix Z5fd	•			•	•						•	•									•				•		•									

*Availability may vary by country or location

LOWEPRO DIGITAL POUCH MATRIX 4-2009



		Terraclime 10	Terraclime 30	Terraclime 50	Luxe	Apex 5AW	Apex 10AW	Apex 20AW	Apex 30AW	Apex 60AW	Rezo 10	Rezo 15	Rezo 20	Rezo 30	Rezo 50	Rezo 60	Napoli 5	Napoli 10	Napoli 20	Napoli 30	Spectrum 10	Spectrum 30	Spectrum 50	Tasca 10	Tasca 20	Tasca 30	D-Pods 10	D-Pods 20	D-Pods 30	D-Pods 40	D-Pods 50	Ridge 10	Ridge 20	Ridge 30	Ridge 60		
GE	A730	•						•				•	•							•	•																
	A735/A835	•						•				•	•							•	•																
	E1035/E1235		•					•				•	•								•	•															
	E1050	•			•			•				•	•									•	•														
	E840S	•						•				•	•									•	•														
	G2/G3	•						•				•	•								•	•															
HP	H855	•	•					•				•	•						•	•				•	•												
	Photosmart E337	•						•				•	•						•	•				•	•												
	Photosmart E427	•			•			•				•	•						•	•				•	•												
	Photosmart M437	•						•				•	•						•	•				•	•												
	Photosmart M447	•						•				•	•						•	•				•	•												
	Photosmart M537	•	•					•				•	•						•	•				•	•												
	Photosmart M547	•						•				•	•						•	•				•	•												
	Photosmart M627	•						•				•	•						•	•				•	•												
	Photosmart M637	•						•				•	•						•	•				•	•												
	Photosmart M737	•						•				•	•						•	•				•	•												
	Photosmart Mz67	•						•				•	•						•	•				•	•												
	Photosmart R742	•			•	•		•				•	•						•	•				•	•												
	Photosmart R837	•						•				•	•						•	•				•	•												
	Photosmart R847	•						•				•	•						•	•				•	•												
Photosmart R937	•	•					•				•	•						•	•				•	•													
JVC	Everio GZ-X900			•						•				•																							
	GR-D250									•																											
	GR-DX25/77/95/97									•																											
	GZ-HD300/HD320									•																											
	GZ-HM200									•																											
	GZ-MG130									•																											
	GZ-MG330/335/365/465									•																											
	GZ-MG630/MG670/MG680									•																											
GZ-MS100									•																												
GZ-MS120/MS130									•																												

*Availability may vary by country or location

LOWEPRO DIGITAL POUCH MATRIX 4-2009



		Terraclime 10	Terraclime 30	Terraclime 50	Luxe	Apex 5AW	Apex 10AW	Apex 20AW	Apex 30AW	Apex 60AW	Rezo 10	Rezo 15	Rezo 20	Rezo 30	Rezo 50	Rezo 60	Napoli 5	Napoli 10	Napoli 20	Napoli 30	Spectrum 10	Spectrum 30	Spectrum 50	Tasca 10	Tasca 20	Tasca 30	D-Pods 10	D-Pods 20	D-Pods 30	D-Pods 40	D-Pods 50	Ridge 10	Ridge 20	Ridge 30	Ridge 60		
Kodak	EasyShare C513	•				•					•										•																
	EasyShare C603																					•															
	EasyShare C613	•																				•															
	EasyShare C653	•																				•															
	EasyShare C703	•																				•															
	EasyShare C713	•																				•															
	EasyShare C763	•																				•															
	EasyShare C913	•																				•															
	EasyShare M1033	•			•																	•															
	EasyShare M1063	•			•	•																•															
	EasyShare M1073 IS	•			•																	•															
	EasyShare M1093 IS	•			•																	•															
	EasyShare M320/M340			•																		•															
	EasyShare M380			•																		•															
	EasyShare M753/M853	•																				•															
	EasyShare M763/M863	•				•																•															
	EasyShare M873/M883	•				•																•															
	EasyShare M893 IS	•				•																•															
	EasyShare Picture Viewer	•				•																•															
	EasyShare V1073/V1273	•				•																•															
	EasyShare V1233/V1253	•		•																		•															
	EasyShare V1285	•																				•															
	EasyShare V803/V1003																					•															
	EasyShare Z1012 IS																					•															
	EasyShare Z1015 IS				•																	•															
	EasyShare Z1085 IS	•																				•															
	EasyShare Z1275	•																				•															
	EasyShare Z1285	•																				•															
	EasyShare Z1485 IS																					•															
	EasyShare Z712 IS																					•															
	EasyShare Z812 IS																					•															
	EasyShare Z8612 IS																					•															
	EasyShare Z885	•																				•															
	Zi6																					•															
Zx1																					•																
Leica	C-Lux 1	•			•																•																
	C-Lux 3	•																			•																
	D-Lux 3			•																		•															
	D-Lux 4			•																		•															
Minox	DC 7022	•			•																•																
	DC-6033 WP				•																	•															
	DC-8011	•			•																	•															
Mustek	DV-4500	•																			•																
	GSmart D35	•																			•																
	MDC-6500z				•																	•															

*Availability may vary by country or location



	Terracime 10	Terracime 30	Terracime 50	Luxe	Apex 5AW	Apex 10AW	Apex 20AW	Apex 30AW	Apex 60AW	Rezo 10	Rezo 15	Rezo 20	Rezo 30	Rezo 50	Rezo 60	Napoli 5	Napoli 10	Napoli 20	Napoli 30	Spectrum 10	Spectrum 30	Spectrum 50	Tasca 10	Tasca 20	Tasca 30	D-Pods 10	D-Pods 20	D-Pods 30	D-Pods 40	D-Pods 50	Ridge 10	Ridge 20	Ridge 30	Ridge 60		
Nikon Coolpix L14/L15	•						•					•						•																		
Nikon Coolpix L16/L18							•					•							•																	
Nikon Coolpix L19/L20		•					•					•									•															
Nikon Coolpix P5000/P5100		•					•															•														
Nikon Coolpix P60	•						•																			•										
Nikon Coolpix P6000 GPS		•					•																			•										
Nikon Coolpix P80			•																							•										
Nikon Coolpix S200	•			•	•						•											•														
Nikon Coolpix S202	•			•	•						•											•														
Nikon Coolpix S210	•			•	•						•											•														
Nikon Coolpix S220	•			•	•						•											•														
Nikon Coolpix S51/S51c	•			•	•						•											•														
Nikon Coolpix S510	•			•	•						•											•														
Nikon Coolpix S52	•			•	•						•											•														
Nikon Coolpix S520	•			•	•						•											•														
Nikon Coolpix S52c	•			•	•						•											•														
Nikon Coolpix S550	•			•	•						•											•														
Nikon Coolpix S560	•			•	•						•											•														
Nikon Coolpix S60	•			•	•						•											•														
Nikon Coolpix S600	•			•	•						•											•														
Nikon Coolpix S610/S610c	•	•		•	•						•											•														
Nikon Coolpix S620	•			•	•						•											•														
Nikon Coolpix S630	•	•		•	•						•											•														
Nikon Coolpix S700	•			•	•						•											•														
Nikon Coolpix S710	•			•	•						•											•														

*Availability may vary by country or location



		Terracline 10	Terracline 30	Terracline 50	Luxe	Apex 5AW	Apex 10AW	Apex 20AW	Apex 30AW	Apex 60AW	Rezo 10	Rezo 15	Rezo 20	Rezo 30	Rezo 50	Rezo 60	Napoli 5	Napoli 10	Napoli 20	Napoli 30	Spectrum 10	Spectrum 30	Spectrum 50	Tasca 10	Tasca 20	Tasca 30	D-Pods 10	D-Pods 20	D-Pods 30	D-Pods 40	D-Pods 50	Ridge 10	Ridge 20	Ridge 30	Ridge 60			
Olympus	FE-190	•			•			•				•							•	•			•															
	FE-20	•																	•	•																		
	FE-25	•																	•	•																		
	FE-280	•			•	•					•									•	•																	
	FE-290		•										•						•	•																		
	FE-300	•			•	•							•							•	•																	
	FE-3000/3010	•			•		•					•								•	•																	
	FE-310	•			•							•							•	•																		
	FE-320	•			•							•								•	•																	
	FE-340		•									•								•	•																	
	FE-350		•									•								•	•																	
	FE-360	•			•							•								•	•																	
	FE-370	•			•							•								•	•																	
	FE-45	•			•							•								•	•																	
	FE-5000/5010	•	•									•								•	•																	
	Mju 1040	•			•	•					•						•			•	•																	
	Mju 1050SW	•			•							•								•	•																	
	Mju 1060	•			•							•								•	•																	
	SP-265UZ			•																•	•																	
	SP-570UZ			•																•	•																	
	Stylus 1010/1020		•										•							•	•																	
	Stylus 1030SW	•										•								•	•																	
	Stylus 1040	•			•	•					•						•			•	•																	
	Stylus 1050SW	•										•								•	•																	
	Stylus 1200/Mju Digital 1200		•									•								•	•																	
	Stylus 550WP/Mju 550WP	•										•								•	•																	
	Stylus 7000/Mju 7000		•									•								•	•																	
	Stylus 770SW	•			•							•								•	•																	
	Stylus 780		•									•								•	•																	
	Stylus 790SW/Mju 790SW	•										•								•	•																	
	Stylus 830/Mju Digital 830		•									•								•	•																	
	Stylus 840		•									•								•	•																	
	Stylus 850SW	•										•								•	•																	
	Stylus Tough 6000/Mju 6000		•									•								•	•																	
	Stylus Tough 8000/Mju 8000	•										•								•	•																	
	X835	•			•							•								•	•																	

*Availability may vary by country or location

LOWEPRO DIGITAL POUCH MATRIX 4-2009



		Terraclime 10	Terraclime 30	Terraclime 50	Luxe	Apex 5AW	Apex 10AW	Apex 20AW	Apex 30AW	Apex 60AW	Rezo 10	Rezo 15	Rezo 20	Rezo 30	Rezo 50	Rezo 60	Napoli 5	Napoli 10	Napoli 20	Napoli 30	Spectrum 10	Spectrum 30	Spectrum 50	Tasca 10	Tasca 20	Tasca 30	D-Pods 10	D-Pods 20	D-Pods 30	D-Pods 40	D-Pods 50	Ridge 10	Ridge 20	Ridge 30	Ridge 60		
Pentax	Optio A30	•			•		•				•	•									•			•													
	Optio A40	•			•		•				•	•									•			•													
	Optio E40	•			•		•				•	•									•			•													
	Optio E50						•				•	•									•			•													
	Optio E60		•				•				•	•									•			•													
	Optio E70		•				•				•	•									•			•													
	Optio L30		•				•				•	•									•			•													
	Optio M30		•				•				•	•									•			•													
	Optio M40		•				•				•	•									•			•													
	Optio M50/M60	•			•		•				•	•									•			•													
	Optio P70		•				•				•	•									•			•													
	Optio S10	•			•		•				•	•									•			•													
	Optio S12	•			•	•	•				•	•						•			•			•													
	Optio T30	•			•		•				•	•									•			•													
	Optio V10		•				•				•	•									•			•													
	Optio V20		•				•				•	•									•			•													
	Optio W30		•				•				•	•									•			•													
	Optio W60		•				•				•	•									•			•													
Optio Z10	•			•		•				•	•									•			•														
Polaroid	A310	•				•				•	•									•			•														
	i533P	•				•				•	•									•			•														
	i631	•				•				•	•									•			•														
	i633	•				•				•	•									•			•														
	i733	•				•				•	•									•			•														
	i832W	•				•				•	•									•			•														
Pure Digital	Flip Mino/Mino HD																			•																	
	Flip Video		•																		•			•													
	Flip Video Ultra		•																		•			•													
RCA	CDS4100			•												•																					
	CDS6300			•												•																					
Ricoh	Caplio 500SE			•																																	
	Caplio GX100		•																																		
	Caplio GX200		•																																		
	Caplio RR770	•		•															•																		
	CX1		•																		•																
	G600		•							•																											
	GR Digital II		•																																		
	GX100 w/finder			•						•																											
	R10		•																		•																
	R50		•																																		
	R8		•																																		

*Availability may vary by country or location



		Terracime 10	Terracime 30	Terracime 50	Luxe	Apex 5AW	Apex 10AW	Apex 20AW	Apex 30AW	Apex 60AW	Rezo 10	Rezo 15	Rezo 20	Rezo 30	Rezo 50	Rezo 60	Napoli 5	Napoli 10	Napoli 20	Napoli 30	Spectrum 10	Spectrum 30	Spectrum 50	Tasca 10	Tasca 20	Tasca 30	D-Pods 10	D-Pods 20	D-Pods 30	D-Pods 40	D-Pods 50	Ridge 10	Ridge 20	Ridge 30	Ridge 60		
Samsung	CL5/PL10	•					•				•								•		•				•												
	Digimax i100	•					•				•								•		•				•												
	Digimax i70	•					•				•								•		•				•												
	Digimax i8	•			•		•				•							•		•		•			•												
	Digimax i80	•					•				•								•		•				•												
	Digimax i85	•					•				•								•		•				•												
	Digimax L730	•					•				•								•		•				•												
	Digimax L74 Wide		•										•												•												
	HZ10W/WB500		•							•				•										•													
	HZ15W/WB550		•							•				•										•													
	L100/110/200/210	•			•		•				•													•													
	L201/SL201	•			•		•				•													•													
	L310W	•			•		•				•													•													
	L73		•																					•													
	L730	•																						•													
	L830		•																					•													
	L83T	•			•		•																	•													
	NV100HD		•																					•													
	NV11		•																					•													
	NV24HD		•																					•													
	NV30/NV40	•			•																			•													
	NV4	•			•						•													•													
	NV8/10/15/20	•			•						•													•													
	NV9/TL9	•																						•													
	S1060		•																					•													
	S1070	•			•																			•													
	S630/S730		•																					•													
	S73		•																					•													
	S760/S860	•																						•													
	S85		•																					•													
	S850/S1050		•																					•													
	SC-HMX10									•						•								•													
	SC-HMX20C									•						•								•													
	SC-X105L									•														•													
	SL102/ES55	•																						•													
	SL202/PL50	•																						•													
	SL30/ES15		•																					•													
	SL420/PL60	•																						•													
	SL620/PL65	•																						•													
	ST10	•																						•													
	TL100/ST50		•																					•													
	TL320/WB100		•																					•													
	TL34HD		•																					•													
	VP-D323/D325i																							•													
	VP-D590i																							•													
	VP-D963 WI																							•													
	VP-HMX10X																							•													
	WB500		•																						•												

LOWEPRO DIGITAL POUCH MATRIX 4-2009



		Terraclime 10	Terraclime 30	Terraclime 50	Luxe	Apex 5AW	Apex 10AW	Apex 20AW	Apex 30AW	Apex 60AW	Rezo 10	Rezo 15	Rezo 20	Rezo 30	Rezo 50	Rezo 60	Napoli 5	Napoli 10	Napoli 20	Napoli 30	Spectrum 10	Spectrum 30	Spectrum 50	Tasca 10	Tasca 20	Tasca 30	D-Pods 10	D-Pods 20	D-Pods 30	D-Pods 40	D-Pods 50	Ridge 10	Ridge 20	Ridge 30	Ridge 60			
Sanyo	VPC-C1E Xacti							•		•			•	•					•																			
	DSC-S5 Xacti												•							•																		
	VPC-C40												•	•						•																		
	VPC-CA9		•												•												•											
	VPC-CG10		•												•												•											
	VPC-HD2000		•												•																							
	VPC-J4 Xacti		•																							•												
	VPC-TH1			•																																		
	VPC-WH1																																					
	VPS-FH1																																					
	Xacti CG9																																					
	Xacti DMX-CA8																																					
	Xacti VPC-CA65																																					
	Xacti VPC-CG65																																					
	Xacti VPC-HD1																																					
	Xacti VPC-HD1000																																					
	Xacti VPC-S50		•																																			
	Xacti VPS-T700		•																																			
Xaxcti VPC-CA6		•																																				
Sharp	VE-CG30U/40U		•																																			
Sigma	DP-1		•																																			
	DP-2		•																																			

*Availability may vary by country or location



		Terracime 10	Terracime 30	Terracime 50	Luxe	Apex 5AW	Apex 10AW	Apex 20AW	Apex 30AW	Apex 60AW	Rezo 10	Rezo 15	Rezo 20	Rezo 30	Rezo 50	Rezo 60	Napoli 5	Napoli 10	Napoli 20	Napoli 30	Spectrum 10	Spectrum 30	Spectrum 50	Tasca 10	Tasca 20	Tasca 30	D-Pods 10	D-Pods 20	D-Pods 30	D-Pods 40	D-Pods 50	Ridge 10	Ridge 20	Ridge 30	Ridge 60				
Sony	DCR-DVD608/708																																						
	DCR-HC18E/20/20E/30/30E/40/40E																																						
	DCR-HC26																																						
	DCR-HC28																																						
	DCR-HC35E																																						
	DCR-HC36																																						
	DCR-HC38/46/HC48																																						
	DCR-HC47E																																						
	DCR-PC55																																						
	DCR-SR47/67/87																																						
	DCR-SX40/41/60																																						
	DSC-G1																																						
	DSC-G3																																						
	DSC-H10																																						
	DSC-H20																																						
	DSC-H50																																						
	DSC-H7/H9																																						
	DSC-S650/S700/S800																																						
	DSC-S730																																						
	DSC-S750/S780																																						
	DSC-T100																																						
	DSC-T2																																						
	DSC-T20																																						
	DSC-T200																																						
	DSC-T300																																						
	DSC-T500																																						
	DSC-T70																																						
	DSC-T700																																						
	DSC-T77/T770																																						
	DSC-T90/T900																																						
	DSC-W110/W200																																						
	DSC-W115/W125																																						
	DSC-W120/W130																																						
	DSC-W150/W170																																						
	DSc-W220																																						
	DSC-W230/W290																																						
	DSC-W300																																						
	HDR-CX100																																						
	HDR-TG1																																						
	MHS-CM1																																						
	MHS-PM1																																						
	NSC-GC1																																						
	Thomson	VMD-160/170																																					
		VMD-270																																					
	Vivitar	V6320																																					
	Vivicam V6200W																																						

*Availability may vary by country or location

LOWEPRO DIGITAL SHOULDER BAG MATRIX 4-2009



		Terradime 100	Apex 100AW	Apex 110AW	Apex 120AW	Apex 140AW	Rezo 110AW	Rezo 120AW	Rezo 140AW	Rezo 160AW	Rezo 170AW	Rezo TLZ 10	Rezo TLZ 20	Cirrus TLZ 5	Cirrus TLZ 15	Cirrus TLZ 25	Cirrus 100	Cirrus 110	Cirrus 120	Cirrus 140
Canon	MD-110 DV						•													
	DC21/DC22		•				•													
	DC210/230						•										•			
	DC-220V		•																	
	DC310		•																	
	DC320		•														•			
	DC330		•														•			
	DC40		•														•			
	DC410/DC420		•														•			
	DC50		•														•			
	EOS 30D w/compact zoom	•							•	•	•				•				•	
	EOS 40D w/compact zoom	•							•						•				•	
	EOS 50D/w compact zoom	•							•										•	
	EOS 5D/5D Mk II w/compact zoom	•				•					•								•	
	EOS Digital Rebel XS/1000D w/compact zoom	•			•		•						•		•				•	
	EOS Digital Rebel Xsi/450D w/compact zoom	•			•		•						•		•				•	
	EOS Digital Rebel Xti/400D w/ compact zoom	•			•			•	•				•		•				•	
	FS10		•														•			
	FS100		•														•			
	FS11		•														•			
	FS21/FS22/FS200		•														•			
	MD110 DV						•													
	MD160						•													
	MV500/500i/550i/530i/600/600i/630i/650i			•																
	MV850i		•																	
	MV930/940/950/960													•						
	MVX250i/200i/200		•																	
	MVX25i/20i			•																
	MVX330i		•																	
	MVX35i/30i			•																
	MVX430																			
	MVX450/460																			
	Optura 300/MVX10i			•																
	PowerShot A570 IS																			
	PowerShot A650 IS																			
	PowerShot A720 IS																			
	PowerShot G10																			
	PowerShot G9																			
	PowerShot S5 IS			•																
	PowerShot SX1 IS	•		•																
	PowerShot SX10 IS	•		•																
	PowerShot SX100 IS																			
	PowerShot SX110 IS																			
	V60HI/65Hi/75Hi					•														
	Vixia HF S10/S100			•				•												
	Vixia HF10/HF11		•																	
	Vixia HF100		•																	
	Vixia HF20/HF200		•																	
	Vixia HG10		•																	
	Vixia HG20/HG21																			
	Vixia HR10			•																

*Availability may vary by country or location

LOWEPRO DIGITAL SHOULDER BAG MATRIX 4-2009



		<i>Terradime 100</i>	<i>Apex 100AW</i>	<i>Apex 110AW</i>	<i>Apex 120AW</i>	<i>Apex 140AW</i>	<i>Rezo 110AW</i>	<i>Rezo 120AW</i>	<i>Rezo 140AW</i>	<i>Rezo 160AW</i>	<i>Rezo 170AW</i>	<i>Rezo TLZ 10</i>	<i>Rezo TLZ 20</i>	<i>Cirrus TLZ 5</i>	<i>Cirrus TLZ 15</i>	<i>Cirrus TLZ 25</i>	<i>Cirrus 100</i>	<i>Cirrus 110</i>	<i>Cirrus 120</i>	<i>Cirrus 140</i>
	Vixia HV20			•												•				
	Vixia HV30			•												•				
	Vixia HV40			•												•				
	ZR80/85/90			•																
	ZR800						•							•						
	ZR830/850						•							•						
	ZR900		•				•										•			
	ZR930						•													
	ZR950						•							•						
	ZR960			•			•										•			
	Casio	EXILIM EX-FH20	•		•			•					•				•			
EXILIM Pro EX-F1		•		•			•							•					•	
Fuji	FinePix IS 1	•		•								•		•						
	FinePix IS Pro w/compact zoom	•		•							•									
	FinePix S1000fd			•										•						
	FinePix S100FS	•					•								•			•		
	FinePix S2000HD			•			•							•	•					
	FinePix S5 Pro w/compact zoom	•									•									•
	FinePix S5800			•			•							•						
	FinePix S700			•			•							•						
	FinePix S8000fd			•			•							•						
FinePix S8100fd			•			•							•							
Hitachi	DZ-BD70A				•		•												•	
	DZ-BD7HA				•		•												•	
	DZ-GX5020A/5080A			•			•													
	DZ-HS300A			•													•			
	DZ-HS500A			•													•			
	DZ-MV230			•																
	DZ-MV230A/270A/270E			•																
	DZ-MV380			•																
	DZ-MV550/MV580			•				•												
	DZ-MV780A		•				•													
HS300A/500A			•			•										•				
HP	Photosmart M737		•				•													

*Availability may vary by country or location

LOWEPRO DIGITAL SHOULDER BAG MATRIX 4-2009



		Terradime 100	Apex 100AW	Apex 110AW	Apex 120AW	Apex 140AW	Rezo 110AW	Rezo 120AW	Rezo 140AW	Rezo 160AW	Rezo 170AW	Rezo TLZ 10	Rezo TLZ 20	Cirrus TLZ 5	Cirrus TLZ 15	Cirrus TLZ 25	Cirrus 100	Cirrus 110	Cirrus 120	Cirrus 140
JVC	Everio GZ-MG130		•				•							•						
	Everio GZ-MG145		•				•							•						
	Everio GZ-MG155/255		•				•							•						
	Everio GZ-MG555U		•				•							•						
	Everio GZ-MG575		•				•							•						
	GR-D20EK/D50EK			•																
	GR-D250						•							•						
	GR-D33/72/93		•											•						
	GR-D73US		•					•						•						
	GR-D750/770/796		•					•						•						
	GR-D850/870		•					•						•						
	GR-DA30		•					•						•						
	GR-DVM76/96		•											•						
	GR-DX25/77/95/97													•						
	GZ-HD3				•															
	GZ-HD7/HD7U										•									
	GZ-MG130		•											•						
	GZ-MG255		•					•						•						
	GZ-MG330/335/365/465													•						
	GZ-MG555US				•															
GZ-MG730		•																		
GZ-MS120/MS130														•						
Kodak	EasyShare Z1012 IS		•											•						
	EasyShare Z1015 IS		•											•						
	EasyShare Z712 IS						•					•		•						
	EasyShare Z812 IS		•											•						
	EasyShare Z8612 IS													•						
	EasyShare Z980			•								•		•						
Leica	Digilux 3	•		•			•										•			
	M8 w/compact zoom	•			•			•						•				•	•	
	V-Lux 1	•			•			•										•		
Minox	DC-6033 WP																			
	DV-4500													•						
Mustek	MDC-6500z													•						
														•						
Nikon	Coolpix 8800	•		•			•					•					•			
	Coolpix L100		•				•						•							
	Coolpix P80		•									•		•						
	Coolpix P90			•								•								
	D200 w/compact zoom	•									•									
	D2x/D2h (Body only)	•			•															
	D300 w/compact zoom	•																		
	D50 w/compact zoom	•			•			•						•		•				
	D60 w/compact zoom	•					•							•		•				
	D70 w/compact zoom	•			•	•				•	•	•		•		•				
	D700 w/compact zoom	•							•	•	•			•		•				
	D80 w/compact zoom	•			•	•				•	•			•		•				
	D80 w/compact zoom	•			•	•				•	•			•		•				
	D90 w/compact zoom	•			•	•				•	•			•		•				

*Availability may vary by country or location

LOWEPRO DIGITAL SHOULDER BAG MATRIX 4-2009



		<i>Terradime 100</i>	<i>Apex 100AW</i>	<i>Apex 110AW</i>	<i>Apex 120AW</i>	<i>Apex 140AW</i>	<i>Rezo 110AW</i>	<i>Rezo 120AW</i>	<i>Rezo 140AW</i>	<i>Rezo 160AW</i>	<i>Rezo 170AW</i>	<i>Rezo TLZ 10</i>	<i>Rezo TLZ 20</i>	<i>Cirrus TLZ 5</i>	<i>Cirrus TLZ 15</i>	<i>Cirrus TLZ 25</i>	<i>Cirrus 100</i>	<i>Cirrus 110</i>	<i>Cirrus 120</i>	<i>Cirrus 140</i>
Olympus	E3 w/compact zoom	•									•									
	E30 w/compact zoom	•									•									
	E410 w/compact zoom	•		•			•							•				•		
	E-420 w/compact zoom	•		•			•							•				•		
	E-420 w/pancake 25mm lens	•		•								•								
	E-510/E520 w/compact zoom	•			•		•								•			•		
	E-620 w/compact zoom	•			•		•								•			•		
	SP-265UZ		•											•						
	SP-570UZ			•														•		
	SP-590UZ	•		•														•		

*Availability may vary by country or location

LOWEPRO DIGITAL SHOULDER BAG MATRIX 4-2009



	<i>Terradime 100</i>	<i>Apex 100AW</i>	<i>Apex 110AW</i>	<i>Apex 120AW</i>	<i>Apex 140AW</i>	<i>Rezo 110AW</i>	<i>Rezo 120AW</i>	<i>Rezo 140AW</i>	<i>Rezo 160AW</i>	<i>Rezo 170AW</i>	<i>Rezo TLZ 10</i>	<i>Rezo TLZ 20</i>	<i>Cirrus TLZ 5</i>	<i>Cirrus TLZ 15</i>	<i>Cirrus TLZ 25</i>	<i>Cirrus 100</i>	<i>Cirrus 110</i>	<i>Cirrus 120</i>	<i>Cirrus 140</i>
Panasonic																			
AG-EZ50			•	•															
AG-HSC1U			•																
HDC-DX1				•			•												
HDC-FX5				•			•												
HDC-HS20		•					•												
HDC-HS250		•					•												
HDC-HS300			•				•												
HDC-HS9		•					•												
HDC-SD1/SD3			•				•												
HDC-SD100/HS100			•				•												
HDC-SD20/TM20		•					•												
HDC-SD9		•					•												
HDC-TM300			•				•												
Lumix DMC-FZ18		•					•												
Lumix DMC-FZ28		•					•												
Lumix DMC-FZ50	•		•				•						•	•	•			•	
Lumix DMC-G1/GH1 w/compact zoom	•			•			•					•	•	•	•		•	•	
Lumix DMC-L10 w/compact zoom	•			•			•						•	•	•		•	•	
NV-GS1/GS4/GS5							•						•	•					
NV-GS11B/15B		•					•						•	•					
NV-GS120B/200B		•					•						•	•					
NV-GS22B/33B/55B							•						•	•					
NV-GS230		•					•						•	•					
NV-GS250/400B					•		•						•	•					
NV-GS320			•				•						•	•					
NV-GS60		•					•						•	•					
NV-GS70		•					•						•	•					
NV-GX7			•				•						•	•					
PV-DC152/252/352		•					•						•	•					
PV-DV203		•					•						•	•					
PV-DV52/102/202/402					•		•						•	•					
PV-DV952				•			•						•	•					
PV-GS120/200				•			•						•	•					
PV-GS150		•					•						•	•					
PV-GS180		•					•						•	•					
PV-GS300			•				•						•	•					
PV-GS31							•						•	•					
PV-GS320			•				•						•	•					
PV-GS33/GS55							•						•	•					
PV-GS35							•						•	•					
PV-GS39		•					•						•	•					
PV-GS400					•		•						•	•					
PV-GS500				•			•						•	•					
PV-GS50S							•						•	•					
PV-GS55							•						•	•					
PV-GS80/85			•				•						•	•					
PV-GS9/12/14/15		•					•						•	•					
PV-GS90		•					•						•	•					
PV-SD5000				•			•						•	•					
SDR-H18		•					•						•	•					
SDR-H20/H250		•					•						•	•					

*Availability may vary by country or location

LOWEPRO DIGITAL SHOULDER BAG MATRIX 4-2009



		<i>Terradime 100</i>	<i>Apex 100AW</i>	<i>Apex 110AW</i>	<i>Apex 120AW</i>	<i>Apex 140AW</i>	<i>Rezo 110AW</i>	<i>Rezo 120AW</i>	<i>Rezo 140AW</i>	<i>Rezo 160AW</i>	<i>Rezo 170AW</i>	<i>Rezo TLZ 10</i>	<i>Rezo TLZ 20</i>	<i>Cirrus TLZ 5</i>	<i>Cirrus TLZ 15</i>	<i>Cirrus TLZ 25</i>	<i>Cirrus 100</i>	<i>Cirrus 110</i>	<i>Cirrus 120</i>	<i>Cirrus 140</i>
	SDR-H200													•						
	SDR-H40/H60															•				
	SDR-S150													•						
	SDR-S7													•						
	VDR-D250			•			•													
	VDR-D300			•																
	VDR-D310				•															
	VDR-D50		•																	
	VDR-M53			•			•													
	VDR-M75		•				•													
Pentax	*ist D w/compact zoom	•				•			•				•							
	*ist DL w/compact zoom	•						•					•							
	*ist DS w/compact zoom	•			•			•					•							
	*st DS 2 w/compact zoom	•			•			•					•							
	K100D w/compact zoom	•							•				•							
	K10D w/compact zoom	•				•							•							
	K110D w/compact zoom	•				•			•				•							
	K2000/K-m w/compact zoom	•			•		•						•							
	K200D w/compact zoom	•			•			•					•							
	K20D w/compact zoom	•					•	•					•							
	X70			•								•								
RCA	CDS4100			•																
	CDS6300			•																
Ricoh	Caplio 500SE			•																
	GX100 w/finder												•							
Samsung	GX-10 w/compact zoom	•				•			•											
	GX-1L w/compact zoom	•				•		•					•		•				•	
	GX-1X w/compact zoom	•				•		•						•					•	
	GX-20 w/compact zoom	•				•			•						•				•	
	SCD180			•										•						
	SC-D382		•					•						•						
	SC-DC173		•																	
	SC-DC575		•																	
	SC-HMX20C			•																
	SC-MX20		•																	
	SC-X105L					•														
	VP-D230/D270i				•		•													
	VP-D323/D325i							•						•						
	VP-D361i		•				•							•						
	VPD5000i			•					•											
	VP-D590i													•						
	VP-D6040i/D6050i					•			•											
	VP-D80i					•														
	VP-D907i		•				•							•						
	VP-D963 WI						•							•						
	VP-D97		•	•					•											
	VP-DX10		•				•													
	VP-HMX10X					•														
	VP-W90/VPL700/VPL900					•			•											
Sanyo	VPC-C1E Xacti													•						
	VPC-C40													•						

*Availability may vary by country or location

LOWEPRO DIGITAL SHOULDER BAG MATRIX 4-2009



		<i>Terradime 100</i>	<i>Apex 100AW</i>	<i>Apex 110AW</i>	<i>Apex 120AW</i>	<i>Apex 140AW</i>	<i>Rezo 110AW</i>	<i>Rezo 120AW</i>	<i>Rezo 140AW</i>	<i>Rezo 160AW</i>	<i>Rezo 170AW</i>	<i>Rezo TLZ 10</i>	<i>Rezo TLZ 20</i>	<i>Cirrus TLZ 5</i>	<i>Cirrus TLZ 15</i>	<i>Cirrus TLZ 25</i>	<i>Cirrus 100</i>	<i>Cirrus 110</i>	<i>Cirrus 120</i>	<i>Cirrus 140</i>		
Sharp	VE-CG30U/40U													•								
	VL-MC500H/500U			•																		
	VL-NZ55U/105U			•																		
	VL-Z1U/Z3U/Z5H/Z7U			•											•							
Sigma	DP-1													•								
	DP-2													•								
	SD-15 w/compact zoom	•							•						•				•			


LOWEPRO DIGITAL SHOULDER BAG MATRIX 4-2009



	<i>Terradime 100</i>	<i>Apex 100AW</i>	<i>Apex 110AW</i>	<i>Apex 120AW</i>	<i>Apex 140AW</i>	<i>Rezo 110AW</i>	<i>Rezo 120AW</i>	<i>Rezo 140AW</i>	<i>Rezo 160AW</i>	<i>Rezo 170AW</i>	<i>Rezo TLZ 10</i>	<i>Rezo TLZ 20</i>	<i>Cirrus TLZ 5</i>	<i>Cirrus TLZ 15</i>	<i>Cirrus TLZ 25</i>	<i>Cirrus 100</i>	<i>Cirrus 110</i>	<i>Cirrus 120</i>	<i>Cirrus 140</i>
Sony																			
Alpha DSLR-A100 w/compact zoom	•				•			•				•							
Alpha DSLR-A100K w/compact zoom	•				•														
Alpha DSLR-A200 w/compact zoom	•			•		•						•							
Alpha DSLR-A300 w/compact zoom	•			•								•		•					
Alpha DSLR-A350 w/compact zoom	•											•						•	
Alpha DSLR-A700 w/compact zoom	•											•		•				•	
Alpha DSLR-A900 w/compact zoom	•				•					•									
DCR-DVD108			•			•													
DCR-DVD203E			•			•													
DCR-DVD205/305		•																	
DCR-DVD308			•			•													
DCR-DVD403E			•			•													
DCR-DVD405			•			•													
DCR-DVD408/508			•			•													
DCR-DVD505			•			•													
DCR-DVD605			•			•													
DCR-DVD608/708			•			•													
DCR-DVD610/810			•			•													
DCR-DVD650/850			•			•													
DCR-DVD705			•			•													
DCR-DVD808E/908E			•			•													
DCR-HC18E/20/20E/30/30E/40/40E													•						
DCR-HC26													•						
DCR-HC28						•							•						
DCR-HC35E						•							•						
DCR-HC36						•							•						
DCR-HC38/46/HC48						•							•		•				
DCR-HC47E						•							•						
DCR-HC52		•				•							•						
DCR-HC62		•				•							•						
DCR-HC65/85/85E		•				•							•						
DCR-HC90E/96		•				•							•		•				
DCR-PC55													•						
DCR-PC8		•					•						•						
DCR-SR100				•									•						
DCR-SR-200/300		•				•							•						
DCR-SR40		•				•							•						
DCR-SR42/SR62/SR82		•				•							•						
DCR-SR45/SR46/SR85		•				•							•						
DCR-SR47/67/87		•				•							•						
DCR-SX40/41/60													•						
DCR-TRV128/328				•									•						
DCR-TRV138				•		•							•						
DCR-TRV280				•		•							•						
DCR-TRV285E				•		•							•						
DSC-H10													•						
DSC-H20													•						
DSC-H50			•			•					•		•						
DSC-H7/H9			•			•					•		•						
DSC-R1	•				•				•			•			•		•		
HDR-CX12		•			•														

*Availability may vary by country or location

LOWEPRO DIGITAL SHOULDER BAG MATRIX 4-2009

		Terradime 100	Apex 100AW	Apex 110AW	Apex 120AW	Apex 140AW	Rezo 110AW	Rezo 120AW	Rezo 140AW	Rezo 160AW	Rezo 170AW	Rezo TLZ 10	Rezo TLZ 20	Cirrus TLZ 5	Cirrus TLZ 15	Cirrus TLZ 25	Cirrus 100	Cirrus 110	Cirrus 120	Cirrus 140
		HDR-CX7			•			•										•		
HDR-HC3			•			•														
HDR-HC5			•			•														
HDR-HC7/HC9			•			•														
HDR-SR1				•				•												
HDR-SR10			•						•											
HDR-SR11/SR12			•																	
HDR-SR5/SR7			•				•													
HDR-UX1				•				•												
HDR-UX10			•				•		•											
HDR-UX5/UX7			•		•			•												
HDR-XR100/200V			•				•													
HDR-XR500V/520V			•				•													
HVR-A1U																			•	
Thomson VMD-160/170			•					•												
VMD-270							•						•							

*Availability may vary by country or location



Edit 100

Edit 110

Edit 120

Edit 120+

Edit 140

Edit 160

Canon		Edit 100	Edit 110	Edit 120	Edit 120+	Edit 140	Edit 160
MD-110 DV		•					
DC21/DC22			•				
DC210/230			•				
DC-220V			•				
DC310			•				
DC320			•				
DC330			•				
DC40		•					
DC410/DC420		•					
DC50			•				
EOS 5D/5D Mk II w/compact zoom							•
FS10		•					
FS100		•					
FS11		•					
FS21/FS22/FS200		•					
G30Hi/35Hi/45Hi						•	
MD110 DV		•					
MD160		•					
MV500/500i/550i/530i/600/600i/630i/650i			•				
MV850i			•	•	•		
MV930/940/950/960		•					
MVX100i/150i						•	
MVX250i/200i/200			•				
MVX25i/20i				•	•		
MVX330i			•	•			
MVX35i/30i			•				
MVX430		•					
MVX450/460		•					
Optura 300/MVX10i		•	•				
Optura Xi/MV3Xi						•	•
V60HI/65Hi/75Hi						•	
Vixia HF S10/S100			•	•			
Vixia HF10/HF11			•	•			
Vixia HF100			•	•			
Vixia HF20/HF200			•	•			
Vixia HG10			•	•			
Vixia HG20/HG21				•			
Vixia HR10			•	•			
Vixia HV20			•				
Vixia HV30			•				
Vixia HV40			•				
ZR80/85/90			•	•			
ZR800		•					
ZR830/850		•					
ZR900		•					
ZR930		•					
ZR950		•					
ZR960		•					
Hitachi	DZ-BD70A			•			
	DZ-BD7HA			•			
	DZ-GX5020A/5080A		•				
	DZ-HS300A		•				
	DZ-HS500A		•				



Edit 100

Edit 110

Edit 120

Edit 120+

Edit 140

Edit 160

	DZ-MV230					•	
	DZ-MV230A/270A/270E		•			•	
	DZ-MV380		•				
	DZ-MV550/MV580		•				
	DZ-MV780A	•					
	HS300A/500A		•				
JVC	Everio GZ-MG130	•					
	Everio GZ-MG145	•					
	Everio GZ-MG155/255	•					
	Everio GZ-MG555U		•				
	Everio GZ-MG575	•					
	GR-AXM18					•	
	GR-D20EK/D50EK		•				
	GR-D250	•					
	GR-D33/72/93		•	•			
	GR-D73US	•					
	GR-D750/770/796	•					
	GR-D850/870	•					
	GR-DA30	•					
	GR-DVL120U						•
	GR-DVM76/96	•	•	•			
	GR-DX25/77/95/97	•	•	•	•		
	GR-FX15EK/SX25/FXM39E/SXM49/SXM58					•	
	GR-SXM38					•	
	GR-XM250US/740U					•	•
	GZ-HD3		•	•	•		
	GZ-HD300/HD320	•					
	GZ-HD7/HD7U					•	
	GZ-HM200	•					
	GZ-MG130	•					
	GZ-MG255	•					
	GZ-MG330/335/365/465	•					
GZ-MG555US			•	•			
GZ-MG630/MG670/MG680	•						
GZ-MG730	•						
GZ-MS100	•						
GZ-MS120/MS130	•						
Nikon	Coolpix 8800					•	
	D200 w/compact zoom						•
Panasonic	AG-EZ50			•	•		
	AG-HSC1U		•				
	HDC-DX1					•	
	HDC-FX5		•				
	HDC-HS20		•	•			
	HDC-HS250		•	•			
	HDC-HS300		•	•			
	HDC-HS9		•				
	HDC-SD1/SD3		•				
	HDC-SD100/HS100		•				
	HDC-SD20/TM20	•					
	HDC-SD9	•					
	HDC-TM300		•	•			
	Lumix DMC-FZ28	•					



Edit 100

Edit 110

Edit 120

Edit 120+

Edit 140

Edit 160

	NV-GS1/GS4/GS5	•					
	NV-GS11B/15B	•					
	NV-GS120B/200B	•					
	NV-GS22B/33B/55B	•					
	NV-GS230	•					
	NV-GS250/400B					•	
	NV-GS320		•				
	NV-GS60	•					
	NV-GS70	•					
	NV-GX7		•				
	PV-DC152/252/352	•		•	•		
	PV-DV203	•		•	•		
	PV-DV52/102/202/402					•	
	PV-DV702					•	
	PV-DV952			•	•		
	PV-GS120/200		•	•	•		
	PV-GS150		•				
	PV-GS180		•				
	PV-GS300	•		•			
	PV-GS31	•	•				
	PV-GS320		•				
	PV-GS33/GS55	•	•	•	•		
	PV-GS35	•					
	PV-GS39	•					
	PV-GS400					•	
	PV-GS500			•	•		
	PV-GS55		•	•	•		
	PV-GS80/85		•				
	PV-GS9/12/14/15	•		•	•		
	PV-GS90	•					
	PV-SD5000		•	•	•		
	SDR-H18		•				
	SDR-H20/H250	•					
	SDR-H200	•					
	SDR-H40/H60	•					
	SDR-S10	•					
	SDR-S10P1	•					
	SDR-S150	•					
	VDR-D150			•			
	VDR-D160			•			
	VDR-D250		•				
	VDR-D300		•				
	VDR-D310		•				
	VDR-D50		•				
	VDR-M53		•	•			
	VDR-M75		•	•			
Pentax	*ist D w/compact zoom						•
	*ist DL w/compact zoom					•	
	*ist DS w/compact zoom					•	
	*st DS 2 w/compact zoom					•	
Samsung	SCD180	•		•	•		
	SC-D382	•					
	SC-DC173	•					



Edit 100

Edit 110

Edit 120

Edit 120+

Edit 140

Edit 160

	SC-DC575	•					
	SC-HMX10	•					
	SC-HMX20C		•				
	SC-MX20	•					
	VP-D230/D270i		•				
	VP-D323/D325i	•					
	VP-D361i	•					
	VPD5000i		•				
	VP-D590i	•					
	VP-D6040i/D6050i		•				
	VP-D80i				•		
	VP-D907i	•					
	VP-D963 WI	•					
	VP-D97		•				
	VP-DX10	•					
	VP-HMX10X	•					
	VP-W90/VPL700/VPL900					•	
Sharp	VL-AX1H/AX1U					•	
	VL-MC500H/500U	•	•	•	•		
	VL-NZ55U/105U			•	•		
	VL-Z1U/Z3U/Z5H/Z7U		•	•	•		
Sony	CCD-TV128/328		•	•	•		
	DCR-DVD108		•				
	DCR-DVD203E		•				
	DCR-DVD205/305		•				
	DCR-DVD308		•				
	DCR-DVD403E		•				
	DCR-DVD405		•				
	DCR-DVD408/508		•				
	DCR-DVD505		•				
	DCR-DVD605		•	•			
	DCR-DVD608/708		•	•			
	DCR-DVD610/810		•	•			
	DCR-DVD650/850		•				
	DCR-DVD705		•	•			
	DCR-DVD808E/908E		•	•			
	DCR-HC18E/20/20E/30/30E/40/40E	•	•	•	•		
	DCR-HC26	•	•				
	DCR-HC28	•					
	DCR-HC35E	•					
	DCR-HC36	•					
	DCR-HC38/46/HC48	•					
	DCR-HC47E	•					
	DCR-HC52	•					
	DCR-HC62	•					
	DCR-HC65/85/85E					•	
	DCR-HC90E/96	•					
	DCR-PC55	•					
	DCR-PC8		•				
	DCR-SR100	•					
	DCR-SR-200/300		•				
	DCR-SR40	•					
	DCR-SR42/SR62/SR82	•					



Edit 100

Edit 110

Edit 120






Edit 120+

Edit 140

Edit 160

	DCR-SR45/SR46/SR85	•					
	DCR-SR47/67/87	•					
	DCR-SX40/41/60	•					
	DCR-TRV128/328		•	•	•		
	DCR-TRV138		•				
	DCR-TRV140					•	
	DCR-TRV240/340					•	
	DCR-TRV280		•				
	DCR-TRV285E		•				
	DSC-H7/H9		•				
	DSC-R1					•	
	DSR-PDX10					•	
	HDR-CX100	•					•
	HDR-CX12		•				
	HDR-CX7		•				
	HDR-HC3		•				
	HDR-HC5		•				
	HDR-HC7/HC9		•				
	HDR-SR1			•	•		
	HDR-SR10		•				
	HDR-SR11/SR12		•				
	HDR-SR5/SR7		•				
	HDR-UX1			•	•		
	HDR-UX10		•				
	HDR-UX5/UX7			•	•		
	HDR-XR100/200V		•				
	HDR-XR500V/520V		•				
	HVR-A1U					•	
Thomson	VMD-160/170	•					
	VMD-270	•					

LOWEPRO CLIPS SERIES MATRIX 4-2009 **Digital Video**






					
		Clips 100	Clips 110	Clips 120	Clips 140
Canon	DC21/DC22	•			
	DC210/230	•			
	DC-220V	•			
	DC310	•			
	DC320	•			
	DC330	•			
	DC40	•			
	DC410/DC420	•			
	DC50	•			
	FS10	•			
	FS100	•			
	FS11	•			
	FS21/FS22/FS200	•			
	G30Hi/35Hi/45Hi				•
	MD110 DV	•			
	MD160	•			
	MV500/500i/550i/530i/600/600i/630i/650i	•			
	MV850i	•			
	MV930/940/950/960	•			
	MVX100i/150i			•	
	MVX250i/200i/200	•			
	MVX25i/20i	•			
	MVX330i	•			
	MVX35i/30i	•			
	MVX430	•			
	MVX450/460	•			
	Optura 300/MVX10i	•			
	Optura Xi/MV3Xi				•
	V60HI/65Hi/75Hi				•
	Vixia HF S10/S100	•			
	Vixia HF10/HF11	•			
	Vixia HF100	•			
	Vixia HF20/HF200	•			
	Vixia HG10	•			
	Vixia HG20/HG21	•			
	Vixia HR10	•			
	Vixia HV20	•			
	Vixia HV30	•			
	Vixia HV40	•			
	ZR80/85/90	•			
ZR800	•				
ZR830/850	•				
ZR900	•				
ZR930	•				
ZR950	•				
ZR960	•				
Hitachi	DZ-BD70A			•	
	DZ-BD7HA			•	
	DZ-GX5020A/5080A	•			
	DZ-HS300A	•			
	DZ-HS500A	•			
	DZ-MV230			•	
	DZ-MV230A/270A/270E			•	
	DZ-MV380	•			
	DZ-MV550/MV580		•		
	DZ-MV780A	•			
HS300A/500A	•				

*Availability may vary depending on country and location.

LOWEPRO CLIPS SERIES MATRIX 4-2009 **Digital Video**






					
		Clips 100	Clips 110	Clips 120	Clips 140
JVC	Everio GZ-MG130	•			
	Everio GZ-MG145	•			
	Everio GZ-MG155/255	•			
	Everio GZ-MG555U	•			
	Everio GZ-MG575	•			
	GR-AXM18				•
	GR-D20EK/D50EK	•			
	GR-D250	•			
	GR-D33/72/93	•			
	GR-D73US	•			
	GR-D750/770/796	•			
	GR-D850/870	•			
	GR-DA30	•			
	GR-DVL120U				•
	GR-DVM76/96	•			
	GR-DX25/77/95/97	•			
	GR-FX15EK/SX25/FXM39E/SXM49/SXM58				•
	GR-SXM38				•
	GR-XM250US/740U				•
	GZ-HD3			•	
	GZ-HD300/HD320	•			
	GZ-HD7/HD7U			•	
	GZ-HM200	•			
	GZ-MG130	•			
	GZ-MG255	•			
	GZ-MG330/335/365/465	•			
	GZ-MG555US	•			
	GZ-MG730	•			
GZ-MS120/MS130	•				

*Availability may vary depending on country and location.

		   			
		Clips 100	Clips 110	Clips 120	Clips 140
Panasonic	AG-EZ50			•	
	AG-HSC1U	•			
	HDC-DX1			•	
	HDC-FX5			•	
	HDC-HS20	•			
	HDC-HS250	•			
	HDC-HS300	•			
	HDC-HS9	•			
	HDC-SD1/SD3	•			
	HDC-SD100/HS100	•			
	HDC-SD20/TM20	•			
	HDC-SD9	•			
	HDC-TM300	•			
	NV-GS1/GS4/GS5	•			
	NV-GS11B/15B	•			
	NV-GS120B/200B	•			
	NV-GS22B/33B/55B	•			
	NV-GS230	•			
	NV-GS250/400B			•	
	NV-GS320	•			
	NV-GS60	•			
	NV-GS70	•			
	NV-GX7	•			
	PV-DC152/252/352	•			
	PV-DV203	•			
	PV-DV52/102/202/402			•	
	PV-DV702				•
	PV-DV952			•	
	PV-GS120/200		•		
	PV-GS150	•			
	PV-GS180	•			
	PV-GS300	•			
	PV-GS31	•			
	PV-GS320		•		
	PV-GS33/GS55	•			
	PV-GS35	•			
	PV-GS39	•			
	PV-GS400			•	
	PV-GS500		•		
	PV-GS50S	•			
	PV-GS80/85	•			
	PV-GS9/12/14/15	•			
	PV-GS90	•			
	PV-SD5000			•	
	SDR-H18	•			
SDR-H20/H250	•				
SDR-H200	•				
SDR-H40/H60	•				
SDR-S10	•				
SDR-S10P1	•				
SDR-S150	•				
VDR-D150	•				
VDR-D160	•				
VDR-D250	•				
VDR-D300			•		
VDR-D310			•		
VDR-D50	•				
VDR-M53	•				
VDR-M75	•				

*Availability may vary depending on country and location.

LOWEPRO CLIPS SERIES MATRIX 4-2009 **Digital Video**

					
		Clips 100	Clips 110	Clips 120	Clips 140
Pentax	K20D w/compact zoom			•	
Samsung	SCD180	•			
	SC-D382	•			
	SC-DC173	•			
	SC-DC575	•			
	SC-HMX10	•			
	SC-HMX20C	•			
	SC-MX20	•			
	SC-X105L	•			
	VP-D230/D270i		•		
	VP-D323/D325i	•			
	VP-D361i	•			
	VPD5000i	•			
	VP-D590i	•			
	VP-D6040i/D6050i	•			
	VP-D80i			•	
	VP-D963 WI	•			
	VP-D97	•			
	VP-DX10	•			
	VP-HMX10X	•			
	VP-W90/VPL700/VPL900				•
Sharp	VE-CG30U/40U	•			
	VL-AX1H/AX1U				•
	VL-MC500H/500U	•			
	VL-NZ55U/105U	•			
	VL-Z1U/Z3U/Z5H/Z7U	•			
Sigma	DP-1	•			

*Availability may vary depending on country and location.



Clips 100

Clips 110

Clips 120

Clips 140

Sony		Clips 100	Clips 110	Clips 120	Clips 140
DCR-DVD108		•			
DCR-DVD203E		•			
DCR-DVD205/305		•			
DCR-DVD308		•			
DCR-DVD403E		•			
DCR-DVD405			•		
DCR-DVD408/508		•			
DCR-DVD505		•			
DCR-DVD605		•			
DCR-DVD608/708		•			
DCR-DVD610/810		•			
DCR-DVD650/850		•			
DCR-DVD705		•			
DCR-DVD808E/908E		•			
DCR-HC18E/20/20E/30/30E/40/40E		•			
DCR-HC26		•			
DCR-HC28		•			
DCR-HC35E		•			
DCR-HC36		•			
DCR-HC38/46/HC48		•			
DCR-HC47E		•			
DCR-HC52		•			
DCR-HC62		•			
DCR-HC65/85/85E				•	
DCR-HC90E/96		•			
DCR-PC55		•			
DCR-PC8		•			
DCR-SR-200/300		•			
DCR-SR40		•			
DCR-SR42/SR62/SR82		•			
DCR-SR45/SR46/SR85		•			
DCR-SR47/67/87		•			
DCR-SX40/41/60		•			
DCR-TRV128/328			•		
DCR-TRV138			•		
DCR-TRV140					•
DCR-TRV240/340					•
DCR-TRV280			•		
DCR-TRV285E				•	
DSR-PDX10					•
HDR-CX100		•			
HDR-CX12		•			
HDR-CX7		•			
HDR-HC3				•	
HDR-HC5				•	
HDR-HC7/HC9				•	
HDR-SR1				•	
HDR-SR10		•			
HDR-SR11/SR12		•			
HDR-SR5/SR7		•			
HDR-UX1				•	
HDR-UX10		•			
HDR-UX5/UX7				•	
HDR-XR100/200V		•			
HDR-XR500V/520V		•			
HVR-A1U					•

*Availability may vary depending on country and location.